



Original		Rechange		Original		Rechange	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





Original		Rechange		Original		Rechange	
	Blue		Blue / Prime Video / Random		>>		>> / Preset+
	TTX		Text / Goto		FAV		Fav / Marker / PC
	Index		D.Menu / Top				
	Hold	+	Shift + Stop /				
	I/II/Audio		Audio / Lang I/II				
	Repeat/Rec		Rec / Rec Mode				
	Repeat/Rec	+	Shift + Green / APP /				
	Stop/Reveal		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Size		Zoom / Size				
	Subtitle		Subtitle / EQ				
	<</Subpage		<< / Tune-				
	>>		>> / Tune+				
	Tv/Radio		TV/Radio /				
	I<<		I<< / Preset-				
	EPG		Guide / EPG / -/--				

