




| Original | Rechange |
|--|--|
|  Standby |  Power |
|  Subtitle |  Subt |
|  Source |  AV |
|  P.Mode |  Shift + Format |
|  S.Mode |  Shift + Dual |
|  Sleep |  Sleep |
|  Size |  Format |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
| 0 | 0 |

| Original | Rechange |
|---|---|
|  Text |  Text |
|  Recall |  Back |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Mute |  Mute |
|  EPG |  Guide |
|  CH + |  Ch + |
|  CH - |  Ch - |
|  Audio |  Dual |
|  i / Display |  Info |
|  TV / Radio |  TV/R |
|  Rec |  Rec |
|  T-Shift |  Media |
|  Up |  Up |
|  Left |  Left |
|  Enter |  Ok |
| Right | Right |





| Original | | Rechange | | Original | Rechange |
|---|-------------------|---|--------------|----------|----------|
|  | Down |  | Down | | |
|  | Menu |  | Menu | | |
|  | Exit |  | Exit | | |
|  | Red |  | Red | | |
|  | Green |  | Green | | |
|  | Yellow |  | Yellow | | |
|  | Blue |  | Blue | | |
|  | Reveal |  | Smart | | |
|  | Index |  | Shift + Info | | |
|  | Play/Pause / Hold |  | Play | | |
|  | Play/Pause / Hold |  | Pause | | |
|  | I<< / Cancel |  | I<< | | |
|  | >>I / Subpage |  | >>I | | |
|  | Stop / Fav |  | Stop | | |
|  | Stop / Fav |  | Pre Ch | | |
|  | << / Fav - |  | << | | |
|  | >> / Fav + |  | >> | | |

