

























 











 


 



 

 

 





Original	Rechange
 Internet	 Smart / List
 Power	 Power
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >>  / Preset+
 Screen	 Picture / Format
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Presets	 Setup / OPT /
 EPG	 Guide / EPG / --
 Text	 Text / Goto
 FAV	 Fav / Marker / PC

Original	Rechange
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Swap	 D.Menu / Top
 Menu	 Menu / Home
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Up	 Up





	Original	Recharge	Original	Recharge
	 V+	 Vol+		
	 Left	 Left		
	 Ok	 OK		
	 Right	 Right		
	 P-	 CH / Page-		
	 Down	 Down		
	 V-	 Vol-		
	 Back	 Back / Return		
	 Exit	 Exit / Cancel / Clear		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 Multimedia	 Display / Media		
	 My Button 1	 Eject / Surround		
	 My Button 2	 TV/Radio /		
	 Info	 Info / Angle		

