

























 





















 










 

 


Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/-
 Rec	 Rec / Rec Mode
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-

Original	Rechange
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 ≡	 D.Menu / Top
 Input	 AV / Input / RDS
 Smart Colors	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Back	 Back / Return
 EXIT	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Home	 Menu / Home
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Recharge	Original	Recharge
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Subt	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		
 TXT	 Text / Goto		
 Netflix	 Shift + Red / Netflix /		
 YouTube	 Shift + Yellow / YouTube /		
 prime video	 Shift + Blue / Prime		
 Google Play	 Shift + Green / APP /		

Original	Recharge	Original	Recharge

