



 

 































 

 









 

 





 

 





 

 





Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 [:≡]	 D.Menu / Top	 L / R	 Eject / Surround
 Smart S	 Sound / Title	 Index / Play	 Play / Slow
 Smart P	 Shift + Picture / Format	 Index / Play	 Display / Media

Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	Sleep	Sleep / Timer
F1	Exit / Cancel / Clear	Recall	Back / Return
[:≡]	D.Menu / Top	L / R	Eject / Surround
Smart S	Sound / Title	Index / Play	Play / Slow
Smart P	Shift + Picture / Format	Index / Play	Display / Media



