




 





















 




 


 





 


 
Original	Rechange
 Power	 Power
 Mute	 Mute
 Red/Title	 Red
 Green/Goto	 Green
 Yellow/Repeat	 Yellow
 Blue/A-B	 Blue
 <</Index	 <<
 >>/Hold	 >>
 I<</Size	 I<<
 >>I/Subpage	 >>I
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 USB	 Smart
 Subtitle	 Subt
 TV/TXT	 Text
 Cancel	 Media

Original	Rechange
 Reveal	 Options
 Nicam/A2	 Dual
 Tv/Radio	 TV/R
 FAV	 Pre Ch
 Nothing	 3D
 Sleep	 Sleep
 Disp	 Info
 Input	 AV
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -





Original		Rechange	
	EPG		Guide
	CH.L		List
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Picture	 + 	Shift + Format
	Aspect		Format

Original		Rechange	
	Recall		Back
	Sound	 + 	Shift + Dual

