






| Original | Rechange |
|---|--|
|  Power |  Power |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Rec |  Rec / Rec Mode |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |
|  Guide |  Guide / EPG / -/-- |
|  3D |  Eject / Surround |
|  Ambilight |  Display / Media |
|  Source |  AV / Input / RDS |
|  TV |  TV/Radio / |
|  [<>]/Format |  Picture / Format |
|  Home |  Menu / Home |
|  Smart Tv |  Smart / List |
|  ≡/List |  Shift + Smart / List |
|  [i]/Info |  Info / Angle |

| Original | Rechange |
|---|---|
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Exit |  Exit / Cancel / Clear |
|  Down |  Down |
|  Ill/Options |  Setup / OPT / |
|  Back |  Back / Return |
|  CH- |  CH- / Page- |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Mute |  Mute / Dimmer |
|  Vol+ |  Vol+ |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |



