



Original		Rechange		Original		Rechange	
	Power		Power		Rec		Rec / Rec Mode
	Mute		Mute / Dimmer		PVR List		Smart / List
	Red		Red / Netflix / Search		Menu		Menu / Home
	Green		Green / APP / Repeat		Up		Up
	Yellow		Yellow / YouTube / Repeat		Exit		Exit / Cancel / Clear
	Blue / Timer		Blue / Prime Video / Random		Left		Left
	Format		Picture / Format		OK		OK
	RES.		AV / Input / RDS		Right		Right
	TTX		Text / Goto		EPG		Guide / EPG / -/-
	S-T		Subtitle / EQ		Down		Down
	I<<		I<< / Preset-		Info		Info / Angle
	>>I		>>I / Preset+		CH +		CH+ / Page+
	<<		<< / Tune-		TV / Rad		TV/Radio /
	>>		>> / Tune+		Vol +		Vol+
	Play / Pause		Play / Slow		CH -		CH- / Page-
	Play / Pause		Pause / Step / Freeze		Audio		Audio / Lang I/II
	Stop		Stop / Hold		Vol -		Vol-





Original		Recharge		Original	Recharge
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	FAV		Fav / Marker / PC		
	0		0		
	Recall		Back / Return		

