

 

 














 














 
















Original		Recharge		Original		Recharge	
	Power		Power		Vol -		Vol-
	Input		AV / Input / RDS		Format		Picture / Format
	1		1		Prog -		CH- / Page-
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		Menu		Menu / Home
	7		7		Media		Display / Media
	8		8		Up		Up
	9		9		Left		Left
	Guide		Guide / EPG / -/--		OK		OK
	0		0		Right		Right
	Infos		Info / Angle		Back		Back / Return
	Vol +		Vol+		Down		Down
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Prog +		CH+ / Page+		AD		Audio / Lang I/II





	Original	Recharge	Original	Recharge
	Subtitles	Subtitle / EQ		
	Text	Text / Goto		
	Radio	TV/Radio /		
	I<<	I<< / Preset-		
	<<	<< / Tune-		
	>>	>> / Tune+		
	>>I	>>I / Preset+		
	Rec	Rec / Rec Mode		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		

