



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
CH.List	Smart / List
0	0
Recall	Back / Return
Vol+	Vol+
PIC.Mode	Picture / Format
S.Mode	Sound / Title

Original	Rechange
CH+	CH+ / Page+
Vol-	Vol-
Source	AV / Input / RDS
CH-	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Menu	Menu / Home
Rec	Rec / Rec Mode
Timeshift	Shift + Pause / Step /
Timer	Shift + Sleep / Timer
Rec.List	Shift + Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Original	Recharge	Original	Recharge
	Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	Blue / Prime Video / Random		Blue / Prime Video / Random
	Shift + Picture / Format		Shift + Picture / Format
	TV/Radio /		TV/Radio /
	Sleep / Timer		Sleep / Timer
	Subtitle / EQ		Subtitle / EQ
	Info / Angle		Info / Angle
	D.Menu / Top		D.Menu / Top
	Audio / Lang I/II		Audio / Lang I/II
	Display / Media		Display / Media
	Text / Goto		Text / Goto
	Zoom / Size		Zoom / Size
	Play / Slow		Play / Slow
	Pause / Step / Freeze		Pause / Step / Freeze
	Setup / OPT /		Setup / OPT /
	Stop / Hold		Stop / Hold
	Shift + Stop / Hold		Shift + Stop / Hold

Original	Recharge	Original	Recharge
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

