



 





 



 

 

 

 

 











 














 





 

Original	Rechange
 Power	 Power
 Input	 AV / Input / RDS
 Audio / Nicam/A2	 Audio / Lang I/II
 Aspect	 Zoom / Size
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/--	 Shift + Guide / EPG / --/--
 0	 0

Original	Rechange
 Recall	 Back / Return
 FAV	 Fav / Marker / PC
 Freeze	 Shift + Pause / Step /
 TV/Radio / DVD Title	 TV/Radio /
 TV/Radio / DVD Title	 Shift + Sound / Title
 Red / Angle	 Red / Netflix / Search
 Red / Angle	 Shift + Info / Angle
 Green / Language	 Green / APP / Repeat
 Green / Language	 Shift + Audio / Lang I/II
 Yellow / DVD	 Yellow / YouTube / Repeat
 Yellow / DVD	 Setup / OPT /
 Blue / DVD	 Blue / Prime Video / Random
 Blue / DVD	 D.Menu / Top
 Sleep	 Sleep / Timer
 Up	 Up
 EPG	 Guide / EPG / --/--
 Left	 Left





Original	Recharge
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Display	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Play/Pause / Hold	 Play / Slow
 Play/Pause / Hold	 Shift + Stop /
 Play/Pause / Hold	 Pause / Step / Freeze
 << / Reveal	 << / Tune-
 >> / Size	 >> / Tune+
 Stop / Index	 Stop / Hold

Original	Recharge
 I<<	 I<< / Preset-
 >>I / S.Page	 >>I / Preset+
 TTX / A-B	 Text / Goto
 TTX / A-B	 Shift + YouTube / Repeat A-B
 T.Shift	 Display / Media
 Open / Close	 Eject / Surround
 Subtitle	 Subtitle / EQ
 Rec / Auto	 Rec / Rec Mode
 List / Repeat	 Smart / List
 List / Repeat	 Shift + Green / APP / Repeat

