



Original	Rechange
Standby	Power
Eject	Eject / Surround
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Mute	Mute / Dimmer
7	7
8	8
9	9
Goto	Text / Goto
+10	Guide / EPG / -/-
0	0
Clear	Exit / Cancel / Clear

Original	Rechange
Audio	Audio / Lang I/II
OSD	Display / Media
Angle	Shift + Info / Angle
Zoom	Zoom / Size
Return	Back / Return
Title	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
Select	OK
Right	Right
Setup	Setup / OPT /
Down	Down
PSM	TV/Radio /
Play	Play / Slow
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze





	Original	Recharge	Original	Recharge
REV	<<	TUNE- << / Tune-		
FWD	>>	TUNE+ >> / Tune+		
	l<<	PRESET- l<< / Preset-		
	>>l	PRESET+ >>l / Preset+		
SLOW	Slow	SHIFT + SLOW Shift + Play /		
REPEAT	Repeat	APP Green / APP / Repeat		
A-B	A-B	YouTube REPEAT A-B Yellow / YouTube / Repeat		
P/N	P/N	TOP MENU D.MENU D.Menu / Top		
Key L	Key L	CH PAGE + CH+ / Page+		
Key #	Key #	CH PAGE - CH- / Page-		
Vol-	Vol-	VOL - Vol-		
Vol+	Vol+	VOL + Vol+		
INFO	Info	ANGLE INFO Info / Angle		
KEYBOARD	Keyboard	LIST SMART Smart / List		
IS	IS	PC FAV MARKER Fav / Marker / PC		
PS	PS	FORMAT PICTURE Picture / Format		

