










Original	Rechange
Stop	 Stop / Hold
 Power	 Power
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
0/AV	 0
CH/TR-	 CH- / Page-
CH/TR+	 CH+ / Page+
Rec/OTR	 Rec / Rec Mode
Play/Slow	 Play / Slow
Up	 Up

Original	Rechange
 Pause/Still	 Pause / Step / Freeze
 <<	 << / Tune-
 Left	 Left
 >>	 >> / Tune+
 Right	 Right
 Down	 Down
 Enter	 OK
 Index	 D.Menu / Top
 Cancel	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Time Rec	 Sleep / Timer
 Program	 Shift + TV/Radio / Program
 Call	 Sound / Title
 Clock/Counter	 Shift + Sleep / Timer
 Counter Reset	 Setup / OPT /
 Zero/Return	 Shift + 0
 Speed SP/LP	 Picture / Format





Original	Recharge												
<table border="0"> <tr> <td>TV/VCR</td> <td>TV/VCR</td> </tr> <tr> <td>AUDIO SELECT</td> <td>Audio Select</td> </tr> <tr> <td>EJECT</td> <td>Eject</td> </tr> </table>	TV/VCR	TV/VCR	AUDIO SELECT	Audio Select	EJECT	Eject	<table border="0"> <tr> <td>PROGRAM TV/RADIO</td> <td>TV/Radio /</td> </tr> <tr> <td>LANG I/II</td> <td>Audio / Lang I/II</td> </tr> <tr> <td>SURROUND</td> <td>Eject / Surround</td> </tr> </table>	PROGRAM TV/RADIO	TV/Radio /	LANG I/II	Audio / Lang I/II	SURROUND	Eject / Surround
TV/VCR	TV/VCR												
AUDIO SELECT	Audio Select												
EJECT	Eject												
PROGRAM TV/RADIO	TV/Radio /												
LANG I/II	Audio / Lang I/II												
SURROUND	Eject / Surround												

Original	Recharge

