



Original	Rechange
Standby	Power
Equalizzatore	Shift + Sound / Title
Surround	Shift + Eject / Surround
Eject	Eject / Surround
Audio	Audio / Lang I/II
1	1
2	2
3	3
Angle	Info / Angle
4	4
5	5
6	6
Sottotitoli	Subtitle / EQ
7	7
8	8
9	9
Ricerca	Red / Netflix / Search

Original	Rechange
Canc	Exit / Cancel / Clear
0/10	0
10+	Guide / EPG / -/--
Titolo	Sound / Title
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Programm	TV/Radio /
Down	Down
Display	Display / Media
PAL/NTSC	D.Menu / Top
Setup	Setup / OPT /
Digest	Shift + D.Menu / Top Menu
Vol+	Vol+
Mute	Mute / Dimmer





Original	Recharge
 Mark	 Fav / Marker / PC
 Zoom	 Zoom / Size
 Vol-	 Vol-
 A-B	 Yellow / YouTube / Repeat
 Ripeti	 Back / Return
 Slow	 Shift + Play /
 <</F.RWD	 << / Tune-
 F.FWD/>>	 >> / Tune+
 l<< / Skip-	 l<< / Preset-
 >>l / Skip+	 >>l / Preset+
 Stop	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow

Original	Recharge

