
 

 


 













 



















































Original	Rechange	Original	Rechange
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 Play	 Play / Slow	 Right	 Right
 Pause	 Pause / Step / Freeze	 Reset	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 Down	 Down
 <<	 << / Tune-	 Return	 Back / Return
 >>	 >> / Tune+	 Vol+	 Vol+
 I<<	 I<< / Preset-	 Treb+	 CH+ / Page+
 >>I	 >>I / Preset+	 Vol-	 Vol-
 EQ	 Subtitle / EQ	 OSD	 Display / Media
 Zoom	 Zoom / Size	 Treb-	 CH- / Page-
 TV-Mode	 TV/Radio /	 1	 1
 Setup	 Setup / OPT /	 2	 2
 L/R	 Text / Goto	 3	 3
 Input	 AV / Input / RDS	 4	 4
 Menu	 Menu / Home	 5	 5
 Up	 Up	 6	 6





Original	Recharge
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
10+	GUIDE EPG Guide / EPG / -/--
0/10	HDMI - BAT 0
P/N	PC FAV MARKER Fav / Marker / PC
REPEAT	APP REPEAT Green / APP / Repeat
SUB	YouTube REPEAT A-B Yellow / YouTube / Repeat
+ SUB	Prime Video RANDOM Blue / Prime Video / Random
SLOW	SHIFT + SLOW Play /
A1	SHIFT + TV 1
A2	SHIFT + DVD 2
B1	SHIFT + CD - STB 3
B2	SHIFT + VIDEO 4
C1	SHIFT + TAPE 5
C2	SHIFT + TUNER 6
D1	SHIFT + AUX - HDD 7

Original	Recharge
D2	SHIFT + USB 8 Shift + 8
E1	SHIFT + BLUETOOTH 9 Shift + 9
E2	SHIFT + GUIDE EPG Shift + Guide / EPG / -/--
E3	SHIFT + HDMI - BAT 0 Shift + 0
E4	SHIFT + PC FAV MARKER Shift + Fav / Marker / PC

