



































































Original	Rechange	Original	Rechange
Audio	 Audio / Lang I/II	PRG	 TV/Radio /
AFFICHE	 Power	CLR - EFF	 Exit / Cancel / Clear
Open / Close - OUVRE-FERME	 Eject / Surround	Up	 Up
Angle	 Info / Angle	Left	 Left
1	 1	OK	 OK
Subtitle - SOUS TITRE	 Subtitle / EQ	Title - TITRE	 Sound / Title
Search -	 Red / Netflix / Search	Right	 Right
2	 2	Down	 Down
3	 3	Vol+	 Vol+
4	 4	MODE	 Smart / List
5	 5	Vol-	 Vol-
6	 6	ZOOM	 Zoom / Size
7	 7	A-B	 Yellow / YouTube / Repeat
8	 8	STOP	 Stop / Hold
9	 9	MARK -	 Fav / Marker / PC
0	 0	Return -	 Back / Return
Menu	 Menu / Home	Setup - REGL	 Setup / OPT /

Original	Rechange	Original	Rechange
Audio	 Audio / Lang I/II	PRG	 TV/Radio /
AFFICHE	 Power	CLR - EFF	 Exit / Cancel / Clear
Open / Close - OUVRE-FERME	 Eject / Surround	Up	 Up
Angle	 Info / Angle	Left	 Left
1	 1	OK	 OK
Subtitle - SOUS TITRE	 Subtitle / EQ	Title - TITRE	 Sound / Title
Search -	 Red / Netflix / Search	Right	 Right
2	 2	Down	 Down
3	 3	Vol+	 Vol+
4	 4	MODE	 Smart / List
5	 5	Vol-	 Vol-
6	 6	ZOOM	 Zoom / Size
7	 7	A-B	 Yellow / YouTube / Repeat
8	 8	STOP	 Stop / Hold
9	 9	MARK -	 Fav / Marker / PC
0	 0	Return -	 Back / Return
Menu	 Menu / Home	Setup - REGL	 Setup / OPT /





Original	Recharge	Original	Recharge
F.Rwd - AR.RAPID	<< / Tune-		
F.Fwd - AV.RAPID	>> / Tune+		
Mute -	Mute / Dimmer		
Slow R -	CH- / Page-		
Slow F -	CH+ / Page+		
Skip+ / SAUT+	>>I / Preset+		
Skip- / SAUT-	I<< / Preset-		
PAUSE/IMAGE	Pause / Step / Freeze		
Play - LECTURE	Play / Slow		

