



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Display	Display / Media
Search	Red / Netflix / Search
1	1
2	2
3	3
Photo	Sleep / Timer
4	4
5	5
6	6
Music	Sound / Title
7	7
8	8
9	9
Movie	Zoom / Size
0	0

Original	Rechange
+10	Guide / EPG / -/--
Setup	Setup / OPT /
File	Back / Return
Music SL Ideshow	Audio / Lang I/II
Up	Up
VGA	TV/Radio /
Vol+	Vol+
Left	Left
Enter	OK
Play	Play / Slow
Right	Right
Photo Rotation	Fav / Marker / PC
Down	Down
Photo Zoom	Smart / List
Vol-	Vol-
Photo Transition	Picture / Format
Photo Duration	Eject / Surround



