
 


 
 
 







 






 
 





 
 
 









Original	Recharge	Original	Recharge
POWER		Power	
MUTE		Mute	
DISPLAY		Info	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
--		Guide	
RETURN		Back	
VOL+		Vol +	
VOL-		Vol -	
^ CH+		Up	
v CH-		Down	
<		Left	
>		Right	
PLAY/ENTER		Ok	
MENU		Menu	
		Pause	
<<		<<	
>>		>>	
<<		<<	
>>		>>	
EDJECT		Eject	
STOP		Stop	
ZOOM		Shift + Eject	
SUBTITLE		Subt	
SLOW		Rec	
INPUT		AV	



Original	Recharge	Original	Recharge
>	 Play		
ANGLE	 Pre Ch		
PCB	 TV/R		
REPEAT	 Text		
^ CH+	 Ch +		
v CH-	 Ch -		
AUDIO	 Dual		
A-B	 D. Menu		
SETUP	 Options		

