

 

 





 

 


 
 


 
 
 



 




Original	Rechange
 Power	 Power
 Mute	 Mute
 Source	 AV
 P Mode	 Format
 S Mode	 Shift + Dual
 Audio I / II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0

Original	Rechange
 -/-- / +10	 Shift + Guide
 Recall / Program	 Back
 TV Menu	 Menu
 Exit	 Exit
 Goto / Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK / Enter	 Ok
 V -	 Vol -
 V +	 Vol +
 P -	 Ch -
 P +	 Ch +
 Red / DVD	 Red
 Green / A-B	 Green





Original		Rechange		Original		Rechange	
	Yellow / Angle		Yellow				
	Blue / Repeat		Blue				
	Subtitle		Subt				
	Play / Pause /		Play				
	Size		3D				
	D.Dis / Reveal		Smart				
	D.Menu / Mix		D. Menu				
	Zoom / Index		Shift + Eject				
	I<< / Fav		I<<				
	I<< / Fav		Pre Ch				
	>>I / Subpage		>>I				
	Stop / Language		Stop				
	<< / Fav -		<<				
	>> / Fav +		>>				
	Eject / EPG		Guide				
	Eject / EPG		Eject				

