 

 





 



 





 





 

 

 

 

 

 



 












 



 
 

 







Original		Rechange		Original		Rechange	
	Power		Power		[≡?]/Source		AV / Input / RDS
	Mute		Mute / Dimmer		Menu		Menu / Home
	[≡]/Text		Text / Goto		Up		Up
	Play		Play / Slow		Left		Left
	Pause		Pause / Step / Freeze		Enter		OK
	[≡+]		Shift + Stop /		Right		Right
	Stop/Still		Stop / Hold		Down		Down
	Radio		TV/Radio /		[≡i]/Info		Info / Angle
	Format		Picture / Format		Exit		Exit / Cancel / Clear
	<<		<< / Tune-		Vol+		Vol+
	Red		Red / Netflix / Search		Index		Setup / OPT /
	>>		>> / Tune+		CH+		CH+ / Page+
	Green		Green / APP / Repeat		Vol-		Vol-
	I<<		I<< / Preset-		List		Smart / List
	Yellow		Yellow / YouTube / Repeat		CH-		CH- / Page-
	>>I		>>I / Preset+		1		1
	Blue		Blue / Prime Video / Random		2		2





Original		Recharge		Original		Recharge	
	3		3		Rec		Rec / Rec Mode
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	O)/Audio		Audio / Lang I/II				
	0		0				
	DVB		Display / Media				
	Fav ♥		Fav / Marker / PC				
	Sleep		Sleep / Timer				
	EPG		Guide / EPG / -/--				
	Back		Back / Return				
	[≡x]		D.Menu / Top				
	[≡o]/Subtitle		Subtitle / EQ				
	USB		Shift + 8				

