



Original	Recharge	Original	Recharge
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Menu	 Menu / Home
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Vol +	 Vol+
 6	 6	 List	 Smart / List
 7	 7	 CH +	 CH+ / Page+
 8	 8	 Vol -	 Vol-
 9	 9	 CH -	 CH- / Page-
 Source	 AV / Input / RDS	 Fav	 Fav / Marker / PC
 0	 0	 Sleep	 Sleep / Timer
 Info	 Info / Angle	 Index	 D.Menu / Top
 DMP	 Display / Media	 Recall	 Back / Return
 Up	 Up	 Red / <<	 Red / Netflix / Search
 EPG	 Guide / EPG / -/--	 Red / <<	 << / Tune-



