
 



 





Original	Rechange
 Swap	 Smart / List
 Text	 Text / Goto
 Media	 Display / Media
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Back	 Back / Return
 FAV	 Fav / Marker / PC

Original	Rechange
 Subtitle	 Subtitle / EQ
 i	 Info / Angle
 V-Format	 Picture / Format
 Vol+	 Vol+
 Page+	 Shift + CH+ /
 P+	 CH+ / Page+
 Vol-	 Vol-
 Page-	 Shift + CH- /
 P-	 CH- / Page-
 Audio	 Audio / Lang I/II
 AD	 Shift + Audio / Lang I/II
 Sound / TV/Radio	 Sound / Title
 Guide	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right





	Original	Recharge	Original	Recharge
	Menu	 Menu / Home		
	Down	 Down		
	Exit	 Exit / Cancel / Clear		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	Rec	 Rec / Rec Mode		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	Timer	 Sleep / Timer		
	Aspect	 Zoom / Size		

