



 





 














 











 

 










	Original	Rechange
	Power	 Power
	TV/AV	 AV
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	-/-	 GUIDE Guide
	Timer	 +  Shift + AV
	Picture	 +  Shift + Format
	Sound	 +  Shift + Dual
	Return	 BACK Back

	Original	Rechange
	Vol+	 Vol +
	Vol-	 Vol -
	Mute	 Mute
	CH+	 Ch +
	CH-	 Ch -
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left
	OK	 Ok
	Sys Menu	 Menu
	Display	 +  Shift + Info
	TV/TXT	 Text
	Cancel	 Smart
	Reveal	 Options
	Nicam/A2	 Subt
	Hold/Prog-	 I<<



