



 

























 
 






















 







 









Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		PR+		CH+ / Page+
	1		1		PR-		CH- / Page-
	2		2		Enter		OK
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Info		Info / Angle
	8		8		Tools		Setup / OPT /
	9		9		Menu		Menu / Home
	0		0		Guide		Guide / EPG / -/-
	TTX/MIX		Text / Goto		Content		D.Menu / Top
	PRE-CH		Back / Return		Return		Shift + Back / Return
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	CH List		Smart / List		Subt.		Subtitle / EQ
	Vol+		Vol+		Media.P		Display / Media





Original		Recharge		Original	Recharge
	P.Size		Zoom / Size		
	AD		Audio / Lang I/II		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	3D	+	Shift + 3		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Play		Play / Slow		
	Internet Tv		TV/Radio /		
	Pause		Pause / Step / Freeze		
	Rec		Rec / Rec Mode		
	Stop		Stop / Hold		
	<<		<< / Tune-		
	>>		>> / Tune+		

