



 



 

 











 



 



 



 



 




 



 












 


 








Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute / Dimmer
	TV/DTV		TV/Radio /		PR+		CH+ / Page+
	Source		AV / Input / RDS		PR-		CH- / Page-
	1		1		Guide		Guide / EPG / -/--
	2		2		Menu		Menu / Home
	3		3		CH.List		Smart / List
	4		4		Tools		Setup / OPT /
	5		5		Return		Shift + Back / Return
	6		6		Info		Info / Angle
	7		7		Exit		Exit / Cancel / Clear
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	-/--		Shift + Guide / EPG / -/--		Left		Left
	PRE-CH		Back / Return		Enter		OK
	Vol+		Vol+		Red		Red / Netflix / Search
	Vol-		Vol-		Green		Green / APP / Repeat





Original	Recharge	Original	Recharge
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	P.Size		Zoom / Size
	DMA		Audio / Lang I/II
	HDMI		Shift + 0
	E.Mode		D.Menu / Top
	Subt		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Recharge	Original	Recharge

