

 

 

 

 
 
 



 

 

 
 

 



 




 







	Original	Rechange
	Power	 Power
	Source	 AV
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	TTX/MIX	 Text
	PRE-CH	 Pre Ch
	Vol+	 Vol +
	Vol-	 Vol -
	Mute	 Mute

	Original	Rechange
	P+	 Ch +
	P-	 Ch -
	CH List	 List
	Content	 3D
	Menu	 Menu
	Guide	 Guide
	Tools	 Options
	Info	 Info
	Return	 Back
	Exit	 Exit
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left
	Enter	 Ok
	Red	 Red
	Green	 Green





Original		Recharge		Original	Recharge
	Yellow		Yellow		
	Blue		Blue		
	Media. P		Media		
	Internet/@TV		Smart		
	Dual I-II		Dual		
	AD		Shift + Subt		
	P.Size		Format		
	Subt.		Subt		
	<<		<<		
	Pause		Pause		
	>>		>>		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

