

 

 

 

 

 





 





















| Original | Rechange |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Tv System |  D.Menu / Top |
|  Display |  Display / Media |
|  Subtitle |  Subtitle / EQ |
|  Audio |  Audio / Lang I/II |
|  Zoom |  Zoom / Size |
|  Setup |  Setup / OPT / |
|  Goto |  Text / Goto |
|  Option |  Shift + Setup / OPT / Tools |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |

| Original | Rechange |
|--|---|
|  8 |  8 |
|  9 |  9 |
|  Return |  Back / Return |
|  0 |  0 |
|  Home |  Menu / Home |
|  >>I |  >>I / Preset+ |
|  Play |  Play / Slow |
|  Vol+ |  Vol+ |
|  I<< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  Vol- |  Vol- |
|  Pause/Step |  Pause / Step / Freeze |
|  Repeat |  Shift + Green / APP / |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |



