

 

 

































Original	Recharge
 Power	 Power
 Source	 AV / Input / RDS
 HDMI	 Shift + 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Recharge
 P+	 CH+ / Page+
 Vol-	 Vol-
 CH.List	 Smart / List
 P-	 CH- / Page-
 Media.P	 Display / Media
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search





Original	Recharge
B Green	Green / APP / Repeat
C Yellow	Yellow / YouTube / Repeat
D Blue	Blue / Prime Video / Random
P.MODE P.Mode	FORMAT PICTURE Picture / Format
S.MODE S.Mode	TITLE SOUND Sound / Title
HI DUAL Dual/I-II	SHIFT + LANG I/II AUDIO Shift + Audio / Lang I/II
AD AD	LANG I/II AUDIO Audio / Lang I/II
P.SIZE P.Size	SIZE ZOOM Zoom / Size
SUBT. Subt.	EQ SUBTITLE Subtitle / EQ
<<< <<<	TUNE- <<< / Tune-
Pause	STEP-FREEZE Pause / Step / Freeze
>>> >>>	TUNE+ >>> / Tune+
Rec	REC MODE Rec / Rec Mode
▶ Play	SLOW ▶ Play / Slow
■ Stop	HOLD ■ Stop / Hold

Original	Recharge

