

 

 

































Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 HDMI	 Shift + 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Original	Rechange
 P+	 CH+ / Page+
 Vol-	 Vol-
 CH.List	 Smart / List
 P-	 CH- / Page-
 Media.P	 Display / Media
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search





Original		Recharge	
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Dual/I-II		Shift + Audio / Lang I/II
	AD		Audio / Lang I/II
	P.Size		Zoom / Size
	Subt.		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Recharge

