
 

 

 

 

 

 
 



 

 
 
 


 
 

 
 
 

 
 
 



 

 
 

 
 

 

 

 


 


 



 
 


 
 
 







Original		Rechange		Original		Rechange	
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		Open/Close		Eject
	6		6		Menu		Menu
	7		7		Return		Back
	8		8		Title List/Disc Menu		Options
	9		9		Exit		Exit
	0		0		Play List/Title Menu		Dual
	Tv/DVD		TV/R		Timer/Repeat		Sleep
	Input Sel		AV		Marker		Shift + Options
	Subtitle		Subt		Copy		Pre Ch
	Tv Vol+		Vol +		Rec Mode		Shift + Rec
	Tv Vol-		Vol -		Pause/Rec Pause/Timeshift		Format
	Tv Mute/Audio		Mute		Standby/on		Power
	OK		Ok		Tv Standby/on		Shift + Power

 



 



 









 


 
 
 




 

 
 
 






	Original	Rechange	Original	Rechange
	Pause	 Pause		
	Stop	 Stop		
	Play	 Play		
	>>	 >>		
	<<	 <<		
	Rec	 Rec		
	Info	 Info		
	Red/A	 Red		
	Green/B	 Green		
	Yellow/C	 Yellow		
	Blue/D	 Blue		
	>>	 >>		
	<<	  <<		
	Tv Prog+	 Shift + Up		
	Tv Prog-	 Ch +		





Original	Recharge
 Standby/on	 Power
 Tv Standby/on	 Shift + Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input Sel	 AV
 Tv/DVD	 TV/R
 Subtitle	 Subt
 Pause	 Pause

Original	Recharge
 Play	 Play
 Stop	 Stop
 >>	 >>
 <<	 <<
 >>	 >>
  <<	  <<
 Tv Mute/Audio	 Mute
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -
 Prog Up	 Shift + Up
 Prog Down	 Ch +
 Red/A	 Red
 Green/B	 Green
 Yellow/C	 Yellow
 Blue/D	 Blue
 Rec	 Rec
 Menu	 Menu





Original	Recharge
Return	Back
Exit	Exit
Info	Info
Title List/ Disc Menu	Options
Play List/Title Menu	Dual
OK	Ok
Up	Up
Down	Down
Right	Right
Left	Left
Timer/Repeat	Sleep
Marker	Shift + Options
Copy	Pre Ch
Rec Mode	Shift + Rec
Pause/Rec Pause/Timeshift	Format
DVD	Shift + 1
HDD	Shift + 2

Original	Recharge
USB	Shift + 3

