

 

 



 

 





 

 

 

 

 

 

 

 

 





Original	Recharge
 Standby/On	 Power
 Open/Close	 Eject / Surround
 Source	 AV / Input / RDS
 USB	 Shift + 8
 DTV/Analog	 Smart / List
 HDD	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/DVD	 Display / Media
 0	 0

Original	Recharge
 Copy	 Setup / OPT /
 I<<	 I<< / Preset-
 Repeat	 Shift + Green / APP /
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Tv Vol+	 Vol+
 Mute	 Mute / Dimmer
 Prog+	 CH+ / Page+
 Tv Vol-	 Vol-
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up























Original	Recharge
Return	Back / Return
Left	Left
OK	OK
Right	Right
Info	Info / Angle
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Title List/Disc Menu	D.Menu / Top
Subtitle	Subtitle / EQ
Marker	Fav / Marker / PC
Play List/Title Menu	Shift + Menu /
Text	Text / Goto
Tv/Radio	TV/Radio /

Original	Recharge
FAV List	Shift + Fav / Marker / PC
Timer	Sleep / Timer
Rec	Rec / Rec Mode
Guide	Guide / EPG / -/--
Rec Mode	Shift + Rec / Rec Mode
Rec Pause/Time Shift	Shift + Pause / Step /





Original	Recharge	Original	Recharge
Standby/On	 Power	0	 0
Mute	 Mute / Dimmer		
Tv/DVD	 TV/Radio /		
Source	 AV / Input / RDS		
Tv Vol+	 Vol+		
Prog+	 CH+ / Page+		
Tv Vol-	 Vol-		
Prog-	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		

