 

 

 

 
 




 

 

 



 



 



 

 

 

 

 

 

 


 


 

 

 
 
 

 



 





 











 



 

 



 



 



 





Original	Rechange	Original	Rechange
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Return	 Shift + Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 CH List	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE-CH	 Back / Return	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 PR+	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-





	Original	Rechange	Original	Rechange
	Mute	 Mute / Dimmer		
	PR-	 CH- / Page-		
	TTX/MIX	 Text / Goto		
	Media.P	 Display / Media		
	P.Size	 Zoom / Size		
	Dual I-II	 Audio / Lang I/II		
	AD	 Sound / Title		
	Subt.	 Subtitle / EQ		
	<<	 << / Tune-		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	Stop	 Stop / Hold		

