

 





 

 

 



 

 

 

 

 

 

 

 

 



 



 

 

 



 

 

 

 

 

 



 



 

 




Original		Rechange		Original		Rechange	
	Power		Power		PR+		CH+ / Page+
	Source		AV / Input / RDS		Vol-		Vol-
	HDMI		Shift + 0		CH-List		Smart / List
	1		1		PR-		CH- / Page-
	2		2		Content		TV/Radio /
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Tools		Setup / OPT /
	6		6		Up		Up
	7		7		Info		Info / Angle
	8		8		Left		Left
	9		9		Enter		OK
	TTX/MIX		Text / Goto		Right		Right
	0		0		Return		Back / Return
	PRE-CH		Fav / Marker / PC		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red/A		Red / Netflix / Search





Original		Rechange		Original		Rechange	
	Green/B		Green / APP / Repeat				
	Yellow/C		Yellow / YouTube / Repeat				
	Blue/D		Blue / Prime Video / Random				
	P.Mode		Picture / Format				
	SRS		Sound / Title				
	Dual I-II		Audio / Lang I/II				
	E-Manual		D.Menu / Top				
	P.Size		Zoom / Size				
	AD/Subt.		Subtitle / EQ				
	<</I<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>/>>I		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

