





 

 



 



 


 
 

 





 



 



 



 















 





 

 











 



 

 

 

 

 





 

 



 

 











 

 









Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	Mute		Mute / Dimmer		Info		Info / Angle
	Play		Play / Slow		Left		Left
	Pause		Pause / Step / Freeze		Enter/OK		OK
	Stop		Stop / Hold		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	I-II/Dual		Audio / Lang I/II		PRE-CH		Back / Return
	Subtitle		Subtitle / EQ		Vol+		Vol+
	P.Mode		Picture / Format		CH.List		Smart / List
	P.Size		Zoom / Size		P+		CH+ / Page+
	Tv/DTV		TV/Radio /		Vol-		Vol-
	D.Menu		D.Menu / Top		P-		CH- / Page-
	PIP		Setup / OPT /		1		1
	Text/MIX		Text / Goto		2		2
	Source		AV / Input / RDS		3		3
	Menu		Menu / Home		4		4





 

 

 



 

 

 

 







 

 



 
 


 



 

 
 



Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Mute		Mute / Dimmer		2		2
	Play		Play / Slow		3		3
	Pause		Pause / Step / Freeze		4		4
	Stop		Stop / Hold		5		5
	<<		<< / Tune-		6		6
	>>		>> / Tune+		7		7
	Menu		Menu / Home		8		8
	Up		Up		9		9
	Info		Info / Angle		0		0
	Left		Left				
	Enter/OK		OK				
	Right		Right				
	Exit		Exit / Cancel / Clear				
	Down		Down				
	Vol+		Vol+				
	Vol-		Vol-				





Original	Recharge
 Cable	 Display / Media
 Power	 Power
 Power Cable	 Shift + Power
 Source	 AV / Input / RDS
 1	 1
 1 Cable	 Shift + 1
 2	 2
 2 Cable	 Shift + 2
 3	 3
 3 Cable	 Shift + 3
 4	 4
 4 Cable	 Shift + 4
 5	 5
 5 Cable	 Shift + 5
 6	 6
 6 Cable	 Shift + 6
 7	 7

Original	Recharge
 7 Cable	 Shift + 7
 8	 8
 8 Cable	 Shift + 8
 9	 9
 9 Cable	 Shift + 9
 0	 0
 0 Cable	 Fav / Marker / PC
 PRE-CH	 Back / Return
 D.Menu	 D.Menu / Top
 HDMI	 Shift + 0
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Vol+	 Vol+
 P+	 CH+ / Page+



