


 
 


 









 
 





| Original | Recharge |
|----------------|---------------|
| Standby | Power |
| Off | Shift + Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| _/---/Del | GUIDE Guide |
| Mute | Mute |
| Vol+ | Vol + |
| Vol- | Vol - |
| Content (Home) | Smart |

| Original | Recharge |
|-------------------|----------|
| Source | AV |
| CH+ | Ch + |
| CH- | Ch - |
| Magicinfo/Lite /S | Media |
| Menu | Menu |
| Blank | Pre Ch |
| Tools | Options |
| Info | Info |
| Return | Back |
| Exit | Exit |
| Up | Up |
| Down | Down |
| Right | Right |
| Left | Left |
| Enter | Ok |
| Red/PC | Red |
| Green/DVI | Green |





| Original | | Recharge | |
|---|-------------|---|--------|
|  | Yellow/HDMI |  | Yellow |
|  | Blue/DP |  | Blue |
|  | Magicinfo |  | TV/R |
|  | 3D |  | 3D |
|  | Lock |  | Eject |
|  | Stop |  | Stop |
|  | <</ << |  | << |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | >>/>> |  | >> |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Recharge | |
|----------|--|----------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

