




 
 




 











 









 

 

 





 

 





 

 

 

 

 










Original	Rechange
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Step	 Yellow
 3D	 3D
 EZ View	 Guide
 I.Replay	 Red
 I.Skip	 Green

Original	Rechange
 <<	 <<
 >>	 >>
 I<<	 I<<
 >>I	 >>I
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Title Menu	 Media
 Disc Menu	 D. Menu
 Return	 Back
 Info	 Info
 Clear	 Exit
 Mode	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Rechange		Original		Rechange	
	Enter		Ok				
	Bookmark		AV				
	Angle		TV/R				
	Subtitle		Subt				
	Audio		Dual				
	Menu		Menu				
	Zoom		Shift + Eject				
	Repeat		Text				
	A-B/Repeat		Blue				

