 
 








 
 
 
 
 



 





 
 
 





 



 




 
 
 
 
 

 
 


Original	Recharge
 Power	 Power
 DVD	 Shift + 1
 Tuner	 Shift + 2
 Aux	 Shift + 3
 USB	 Shift + 4
 Open / Close	 Eject
 TV / Video	 TV/R
 1 / RDS Display	 1
 2	 2
 3 / TA	 3
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8	 8
 9	 9
 0 / Video Sel	 0

Original	Recharge
 Remain	 Guide
 Cancel	 Exit
 <<	 <<
 Repeat	 Text
 Step	 Shift + Pause
 >>	 >>
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I	 >>I
 Volume +	 Vol +
 Volume -	 Vol -
 Mute	 Mute
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 Menu	 Menu



 

 

 
 

 

 

 

 

 



 

 
 






 






Original	Recharge
 Return	 Back
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Info	 Info
 Audio	 Dual
 Subtitle	 Subt
 Dolby PL II Mode	 Red
 Mo/St / Slow	 Shift + Play
 Dolby PL II Effect	 Green
 DSP/EQ	 3D
 Test Mode	 Smart
 Zoom	 Shift + Eject
 P.Scan / Tuner Memory	 Pre Ch
 Logo	 Yellow

Original	Recharge
 Sound Edit	 Media
 NT/PAL / Ez View	 Options
 Slide Mode	 AV
 Sleep	 Sleep
 Digest	 D. Menu
 Dimmer	 Blue





Original		Recharge	
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -

Original		Recharge	
	Menu		Menu
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok

