



Original	Rechange	Original	Rechange
 Power	 Power	 9	 9
 Open/Close	 Eject	 0	 0
 Demo/Dimmer	 Media	 CD Ripping	 Guide
 On/Off Timer	 AV	 Cancel	 Pre Ch
 Timer/Clock	 Shift + AV	 I<<	 I<<
 DVD	 Blue	 Step	 3D
 Tuner	 Yellow	 Pause	 Pause
 Port	 Green	 >>I	 >>I
 AUX	 Red	 <<	 <<
 1	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3	 3	 >>	 >>
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 Mute	 Mute
 7	 7	 Audio	 Dual
 8	 8	 Tuning Up	 Ch +





Original		Recharge		Original		Recharge	
	Tuning Down		Ch -		Echo		Shift + TV/R
	Menu		Menu		Sleep		Sleep
	Info		Info		Slow		List
	Return		Back		Angle		Options
	Exit		Exit		Mic Vol+		Shift + Vol +
	Up		Up		Mic Vol-		Shift + Vol -
	Down		Down		Remain		Smart
	Right		Right		Zoom		Shift + Eject
	Left		Left		Mo/ST		Shift + Options
	Enter		Ok				
	Repeat		Text				
	A-B Repeat		TV/R				
	Tuner Memory		Rec				
	Subtitle		Subt				
	DSP/EQ		D. Menu				
	P.Bass		Shift + Subt				
	P.Sound		Format				

