

 
 



 
 


 


Original	Recharge
 Power	 Power
 Eject	 Eject
 TV Power	 Shift + Power
 Audio	 Dual
 Subtitle	 Subt
 Repeat	 Text
 Repeat A-B	 Shift + Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Recharge
 Cancel	 Shift + Exit
 TV Source	 AV
 I<<	 I<<
 Bonus View	 Smart
 Pause	 Pause
 >>I	 >>I
 <<	 <<
 Stop	 Stop
 Play	 Play
 >>	 >>
 TV Vol +	 Vol +
 TV Vol -	 Vol -
 TV CH +	 Ch +
 TV CH -	 Ch -
 TV Mute	 Mute
 Menu	 Menu
 Up	 Up





Original		Rechange		Original		Rechange	
	Return		Back				
	Right		Right				
	Down		Down				
	Left		Left				
	Enter		Ok				
	Info		Info				
	Exit		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Disc Menu		D. Menu				
	Popop Menu / Title Menu		Shift + Menu				

