



Original	Recharge
POWER	Power
OPEN/CLOSE	Eject
DIMMER	+  Shift + Mute
DVD	Blue
TUNER/BAND	Green
AUX	Red
ASC	+  Shift + Ok
SLOW/MO/ST	List
SUBTITLE	Subt
SUPER 5.1	Options
MUSIC/V-H/P	Dual
MOVIE	D. Menu
I<<	I<<
STOP	Stop
PAUSE	Pause
PLAY	Play
>>I	>>I

Original	Recharge
PL II MODE	Smart
TUNING+ / CH+	Ch +
TUNING- / CH-	Ch -
VOLUME+	Vol +
VOLUME -	Vol -
PL II EFFECT	Media
RETURN	Back
MENU	Menu
INFO	Info
MUTE	Mute
UP	Up
LEFT	Left
ENTER	Ok
RIGHT	Right
DOWN	Down
1/RDS DISPLAY	1
2	2





Original		Recharge	
TA 3	3/TA	3	3
PTY - 4	4/PTY -	4	4
PTY SEARCH 5	5/PTY SEARCH	5	5
PTY + 6	6/PTY +	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
SLEEP	SLEEP	PROG SLEEP	Sleep
CANCEL	CANCEL	CLEAR EXIT	Exit
TEST TONE	TEST TONE	ECO 3D	3D
SOUND EDIT	SOUND EDIT	SHIFT +	Shift + Right
TUNER MEMORY	TUNER MEMORY	SHIFT +	Shift + Down
ZOOM	ZOOM	SHIFT +	Shift + Eject
LOGO	LOGO	SHIFT +	Shift + Up
EZ VIEW/ NTSC/PAL	EZ VIEW/	PICTURE FORMAT	Format
REPEAT	REPEAT	REPEAT TEXT	Text

Original		Recharge	
REMAIN	REMAIN	SHIFT +	Shift + Left

