












Original	Recharge	Original	Recharge
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Up	 Up
 1	 1	 Return	 Back / Return
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Internet	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Shift + Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE CH	 Fav / Marker / PC	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 P +	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-

Original	Recharge	Original	Recharge
 Power	 Power	 TV	 DVD
 TV	 SAT	 AUX	 AUX
 1	 SLOW	 STEP-FREEZE	 HOLD
 2	 TUNE+	 PRESET-	 PRESET+
 3	 TITLE	 LANG	 EQ
 4	 SOUND	 AUDIO	 SUBTITLE
 5	 FORMAT	 SIZE	 TIMER
 6	 PICTURE	 ZOOM	 SLEEP
 7	 TOP MENU	 OPT-TOOLS	 GOTO
 8	 D.MENU	 SETUP	 TEXT
 9	 HOME	 MENU	 ANGLE
 0	 EXIT	 CANCEL	 RETURN
 FAV.CH	 CLEAR	 LIST	 BACK
 PRE-CH	 VOL+	 SMART	 CH PAGE+
 INFO	 VOL-	 MEDIA	 DISPLAY
 MENU	 TV	 NETFLIX	 DVD
 GUIDE	 DVD	 SEARCH	 CD - STB
	 TAPE	 REPEAT	 TUNER
	 TUNER	 REPEAT A-B	 BLUETOOTH
	AUX - HDD	REPEAT	USB
	USB	RANDOM	HDMI - BAT
	BLUETOOTH	VOL+	PC
	HDMI - BAT	FAV MARKER	FAV MARKER
	PC	NETFLIX	APP
	FAV MARKER	APP	YouTube
	FAV MARKER	YouTube	Prime Video
	FAV MARKER	Prime Video	RANDOM
	FAV MARKER	RANDOM	RANDOM





Original	Rechange	Original	Rechange
 Mute	 Mute / Dimmer		
 P -	 CH- / Page-		
 TTX/MIX	 Text / Goto		
 Media P	 Display / Media		
 Content	 D.Menu / Top		
 CH LIST	 Shift + Smart / List		
 AD	 Audio / Lang I/II		
 SUBT.	 Subtitle / EQ		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

