



Original	Rechange
Power Tv	Power
Power STB	Shift + Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TTX/MIX	Text / Goto
0	0
PRE-CH	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer

Original	Rechange
P+	CH+ / Page+
Vol-	Vol-
CH List	Shift + Smart / List
P-	CH- / Page-
Menu	Menu / Home
Smart Hub	Smart / List
Guide	Guide / EPG / -/-
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
OK	OK
Right	Right
Return/Back	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search



