
















Original	Recharge	Original	Recharge
 Power	 Power	 DRC	 Picture / Format
 Function	 Smart / List	 TUNER	 TV/Radio /
 1 / CD	 1	 TUNER	 Shift + 6
 1 / CD	 Shift + 3	 Mo. / St.	 Sound / Title
 2 / VCR	 2	 Input Mode	 AV / Input / RDS
 2 / VCR	 Shift + 4	 Volume+	 Vol+
 3 / DVD	 3	 Volume-	 Vol-
 3 / DVD	 Shift + 2	 Mute	 Mute / Dimmer
 4	 4	 Menu	 Menu / Home
 5 / SAT	 5	 Tuning Mode	 Guide / EPG / -/-
 5 / SAT	 Shift + 0	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 Enter	 OK
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 Sleep	 Sleep / Timer	 Info	 Info / Angle
 0	 0	 Sub Woofer	 Eject / Surround





Original	Recharge
Tuner Memory	Fav / Marker / PC
Stereo	Audio / Lang I/II
SFE.Mode	Green / APP / Repeat
PL. II Mode	Yellow / YouTube / Repeat
PL II Effect	Blue / Prime Video / Random
SPK. Level	Subtitle / EQ
Test Tone	Text / Goto
RDS Display	Shift + Display / Media
PTY+	Shift + Up
PTY Search	Shift + OK
PTY-	Shift + Down
TA	Shift + Right

Original	Recharge

