









 










 




 











Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 prime video	 Shift + Blue / Prime
 Rakuten Tv	 TV/Radio /
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Settings	Setup / OPT /
Info	Info / Angle
AD/Subt.	Subtitle / EQ
Stop	Stop / Hold
<<<	<<< / Tune-
I<<<	I<<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>>	>>> / Tune+
>>>I	>>>I / Preset+

Original	Recharge

