



Original	Recharge
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TTX/MIX	Text / Goto
0	0
PRE-CH	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+

Original	Recharge
Vol-	Vol-
CH List	Smart / List
CH-	CH- / Page-
Netflix	Shift + Red / Netflix /
Home	Menu / Home
prime video	Shift + Blue / Prime
Samsung TV	TV/Radio /
Up	Up
Disney+	Picture / Format
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Original	Recharge
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Settings	Setup / OPT /
Info	Info / Angle
AD/SUBT.	Subtitle / EQ
Stop	Stop / Hold
<<<	<<< / Tune-
I<<<	I<<< / Preset-
Play	Play / Slow
Pause	Pause / Step / Freeze
>>>	>>> / Tune+
>>I	>>I / Preset+

Original	Recharge

