



Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Red	 Red
 Recall	 Back	 Green	 Green
 Game	 Media	 Yellow	 Yellow
 Auto	 Smart	 Blue	 Blue
 Info	 Info	 Zoom	 Eject





	Original	Rechange		Original	Rechange
	Lan/Audio		Dual		
	Text		Text		
	Tv/Radio		TV/R		
	Subtitle		Subt		
	Play		Play		
	Pause		Pause		
	<<		<<		
	>>		>>		

	Original	Rechange		Original	Rechange

