 

 
 

 

 





 

 
 
 









 
 

 
 
 
 

 
 
 


 


 
 

 
 
 


 


 

 


 
 
 



 






Original		Rechange		Original		Rechange	
	Power		Power		?/Help		Options
	TV		TV/R		Menu		Menu
	Video		Smart		P+		Ch +
	↑/CH Scan		Media		P-		Ch -
	PRE-CH		Back		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		→/ ←/P.STD		Format
	3		3		Sleep		Sleep
	4		4		Zoom		Eject
	5		5		Mute		Mute
	6		6		→/ ←/S.STD		D. Menu
	7		7		O/I/II/S.Mode		Dual
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	--		Guide		Blue		Blue
	[+]/[=]/[?]/Display		Info		[≡]		List





Original		Rechange		Original		Rechange	
	[:...]]		Subt				
	[≡◇]		AV				
	[≡]		Text				
	[≡◇]		Ok				
	[≡+]		3D				
	[≡x]		Pre Ch				
	[≡o]		Exit				

