







 
 


 
 

 

 
 
 




 
 


 



 


 
 



 



 



 
 
 


 


 

 
 

 






 






Original		Rechange		Original		Rechange	
	S.Page		Subt		6		6
	Size		Format		7		7
	Memory		Rec		8		8
	List		List		9		9
	Reveal		Dual		0		0
	Stop		Stop		-/--		Guide
	Cancel		Exit		P+		Ch +
	Index		Info		P-		Ch -
	Red		Red		Picture		Shift + Format
	Green		Green		Vol+		Vol +
	Yellow		Yellow		Vol-		Vol -
	Blue		Blue		Mute		Mute
	1		1		Timer		Shift + AV
	2		2		→←		Media
	3		3		Recall		Back
	4		4		TXT		Text
	5		5		TV		TV/R



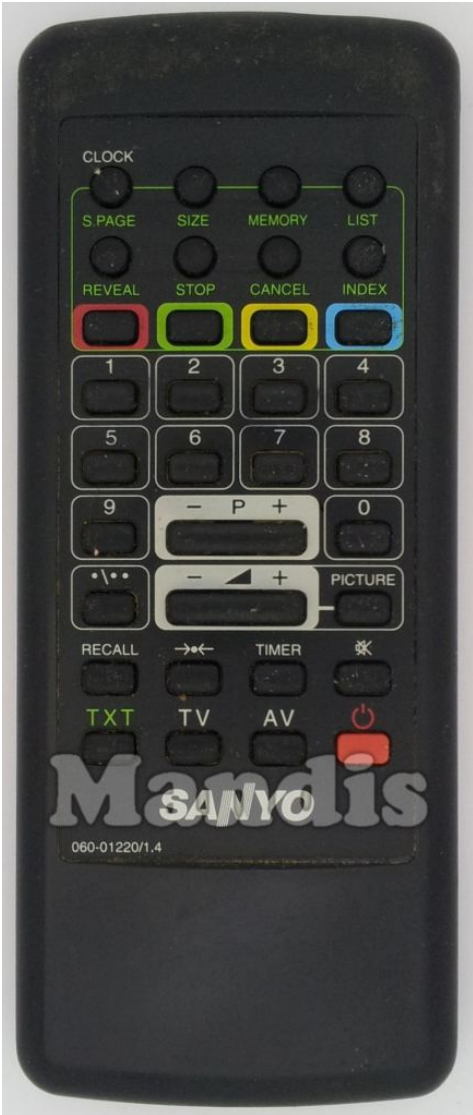

Original	Recharge
 AV	 AV
 Power	 Power

Original	Recharge

