









Original	Rechange
Tv/Input	AV / Input / RDS
Power	Power
Wide	Picture / Format
Mute	Mute / Dimmer
[_]/[▼]/[≡?]	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--/[≡o]	Guide / EPG / -/--
0	0
CS	Smart / List

Original	Rechange
Up	Up
P+	CH+ / Page+
Left	Left
Vol-	Vol-
F/OK	OK
Vol+	Vol+
Right	Right
Down	Down
P-	CH- / Page-
Menu	Menu / Home
→←	Display / Media
P↔P	Fav / Marker / PC
O/[≡x]	Info / Angle
[≡◇]	Zoom / Size
[≡+]	Stop / Hold
A1	Red / Netflix / Search
TXT/TV	Text / Goto





Original	Recharge
 A3	 Green / APP / Repeat
 B1	 Yellow / YouTube / Repeat
 B2	 Blue / Prime Video / Random

Original	Recharge

