











 





 



 















Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Menu	 Menu / Home
 0	 0
 Last	 Back / Return
 Text	 Text / Goto
 Up / CH +	 Up
 Up / CH +	 CH+ / Page+

Original	Rechange
 Exit	 Exit / Cancel / Clear
 Left / Vol -	 Vol-
 Left / Vol -	 Left
 OK	 OK
 Right / Vol +	 Vol+
 Right / Vol +	 Right
 Sub-T	 Subtitle / EQ
 Down / CH -	 Down
 Down / CH -	 CH- / Page-
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 Timer	 Sleep / Timer
 Timeshift	 Smart / List
 Info	 Info / Angle
 Red / I<<	 Red / Netflix / Search
 Red / I<<	 I<< / Preset-
 Green / <<	 << / Tune-





Original	Recharge	Original	Recharge
Green / <<	Green / APP / Repeat		
Yellow / >>	>> / Tune+		
Yellow / >>	Yellow / YouTube / Repeat		
Blue / >>	>> / Preset+		
Blue / >>	Blue / Prime Video / Random		
View Rec	Shift + Rec / Rec Mode		
USB	Shift + 8		
Play / Pause	Play / Slow		
Play / Pause	Pause / Step / Freeze		
Stop	Stop / Hold		

Original	Recharge

